

Providence - Radiant Panels

Installation instructions for standard panels

Packaging

Each panel is individually packaged with the product description clearly shown. The scheduled location can also be stated if requested. Each box contains auxiliary items as required,. The recommended method of installation is with the use of quick release/adjustable wires (not provided),. (Plasterboard installation instructions available on request.)

Storage

All panels should be protected from potential damage, preferably stored indoors and if stacked should be stacked panel face to panel face. The face of the panel is the package surface without a seam and the rear of the panel is the package surface with a seam.

Installation / Mounting

It is recommended that panels with a length of 600/1800 mm are installed using 4 hanging wires, Panels with lengths of 19/3000 mm with 6 hanging wires.

When the panels are hung and positioned they car be connected to the supply by using the push-fit elbows and pipe tails provided and a preferred method of attachment.



Handling

The panels should be carried with the panel width in the vertical/upright position.

